


Mounting the Basic 540 protective cell

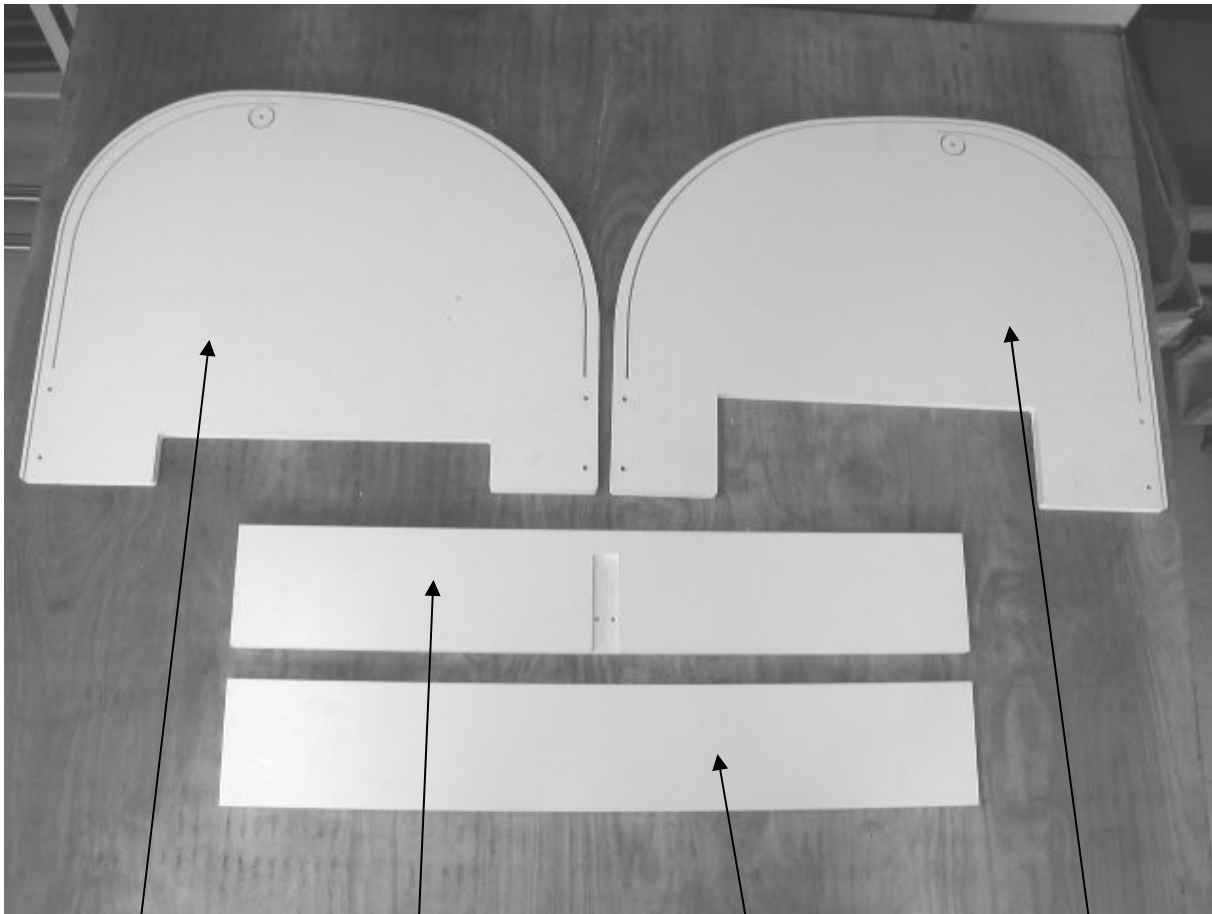


right side panel

front panel

rear panel

left side panel

IMPORTANT: Do not exchange front and rear panel!

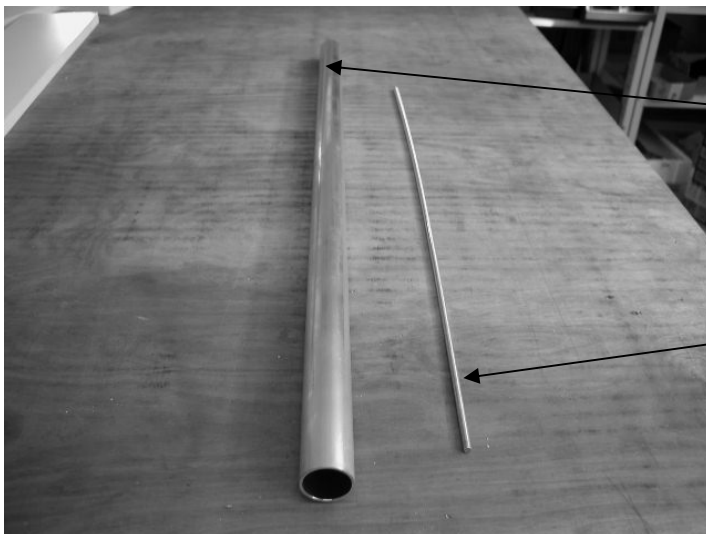

connecting tube
(36x870mm)

thread rod
(m6x1m)


Polycarbonate plate:



L-profiles

polycarbonate plate

IMPORTANT: Follow the instructions very carefully when glueing the L-profiles to the polycarbonate plate (see drawing).

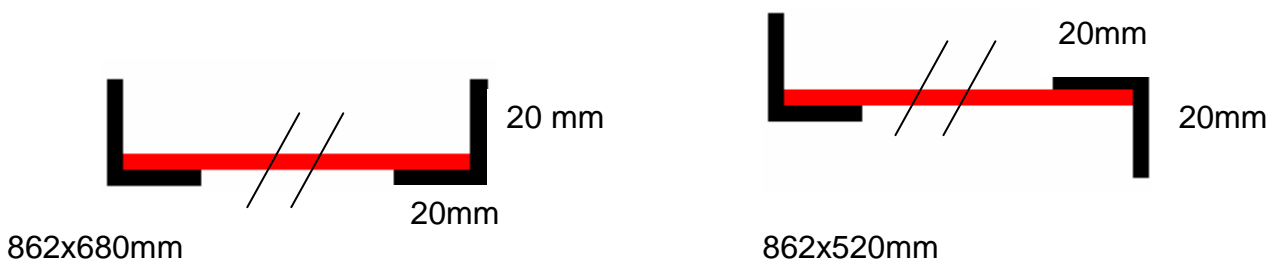

1. Clean the four L-profiles.

2. Glue the 3M tape on the inner dies of the L-profiles.

3. Put the L-profiles carefully on the polycarbonate plate.

Mounting instructions:

1. Put the four plates together.
2. Do not tighten the screws completely.
3. Put the thread rod through the hole in the side panels and the connecting tube.
4. Put the two polycarbonate plates into the designated grooves.
5. Tighten the screws now.
6. Cut the thread rod so that 3mm will overlap and fix the screws.

